



## H-60 and H-90 WALL MOUNT WASTE RECEPTACLE MOUNTING INSTRUCTIONS

### IMPORTANT

PLEASE READ THROUGH INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.

### Unpacking


Open the carton containing the waste receptacle and the wall mount bracket. Remove all packing material.

### Preparation

Due to the various types of wall construction, no mounting hardware will be furnished. Appropriate mounting hardware will need to be obtained to secure mounting bracket to wall.

### Installation

Nine holes (in groups of three, one inch apart) are provided in the mounting bracket for 1/4" hardware to secure the bracket to the wall. Depending on the wall construction and use of the waste receptacle, a minimum of three (3) screws or bolts (one in each group of holes) should be used to secure the bracket to the wall.

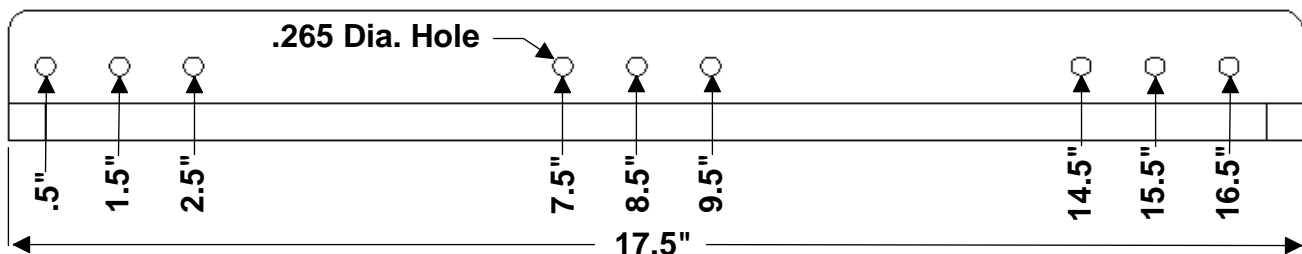

1. Determine the desired location and height of where the receptacle is to be mounted.
2. Place the bracket against wall. Insure it is level and mark the holes to use to mount the bracket.



**NOTE: A minimum height from the floor to the top of the mounting bracket should be observed. For the H-60, it should be a minimum of 27 inches from the floor and for the H-90, a minimum of 31 inches.**

3. Remove the bracket and drill the required diameter holes for the mounting hardware used.
4. Fasten the bracket to the wall.
5. Remove the lid from the receptacle and set it aside.
6. Align the hanger on the back of the waste receptacle with the wall hanger and lower the receptacle until the two meet.
7. Select appropriate plastic bag and place in receptacle.
8. Secure plastic bag with bag clamps and replace the lid.
9. The waste receptacle is now ready for use.